

Quick start guide Touch'N Pay V2


This document describes the main steps for setting up the Touch'N Pay V2

Enter maintenance mode

Press and hold the date until the password entry screen appears, then enter the password : ***#69330#***



The menu in the Touch'N Pay kiosk are organized as follows :
In red the main settings

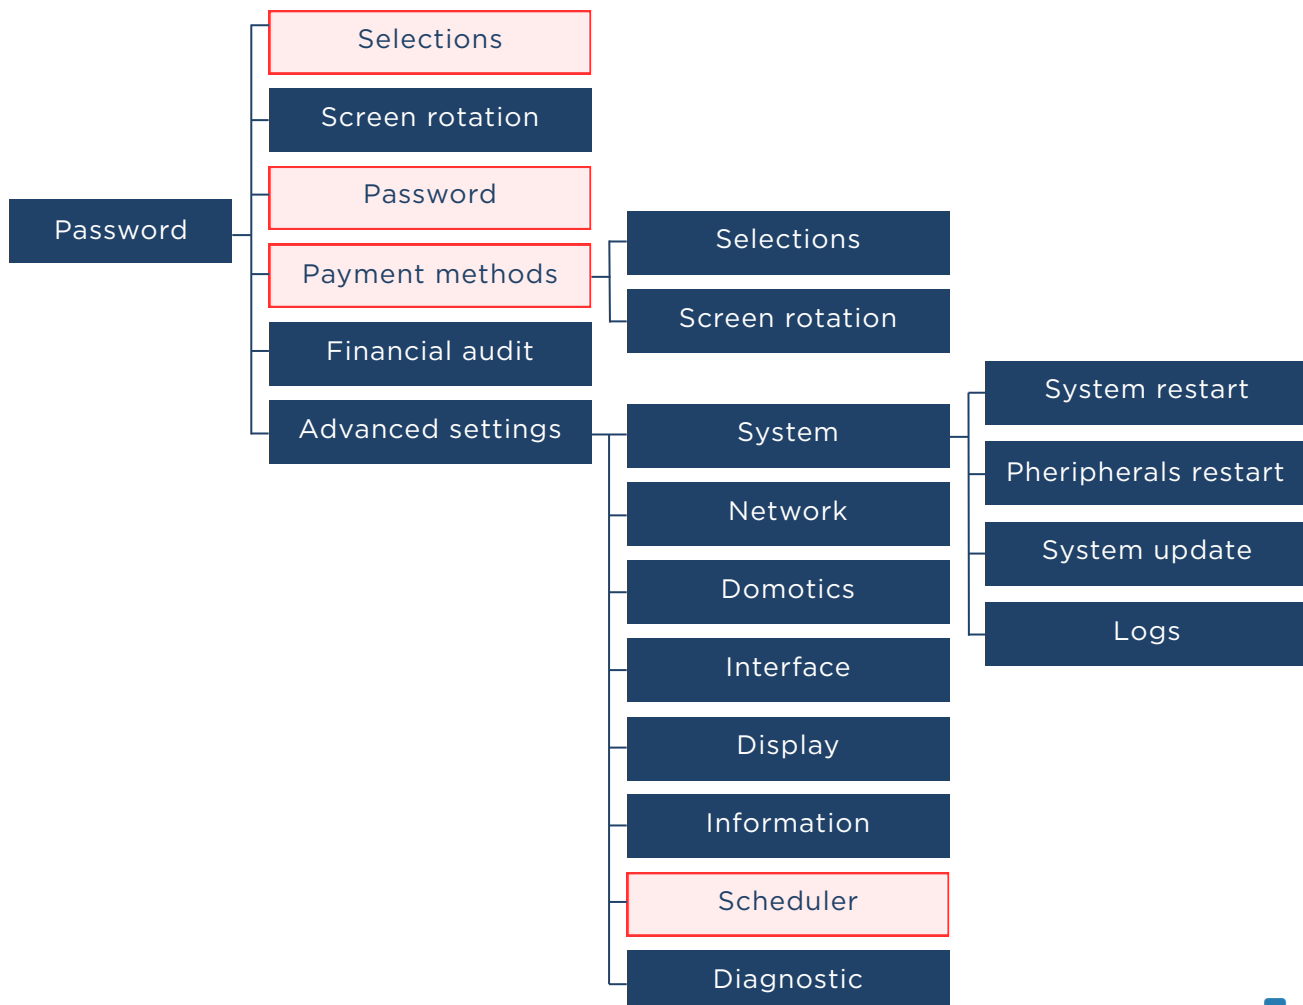

Change the password

The kiosk comes with the factory password. Change this password upon first use to ensure the security of the kiosk.

Configure the selections

Select the type of selection and rename it.
Select the typical value and the unit.

Number of cycles payable at once.

Option to schedule a suggested vend.
ex. Suggest the purchase of detergent along with the purchase of a washing machine.

Type of start
Relay pull-in time and relay release time

Relay number where the selection is connected

Confirm and start again for each selection.



Configure the payment methods

- Enable bills + coins and cashless 1
- Enable overpayment + forced sale
- Select the accepted bills
- Select the accepted coins



Configure the submission of the activity report

You need to add a task to the scheduler and configure the submission of the activity report