


Card dispenser Cleaning guide

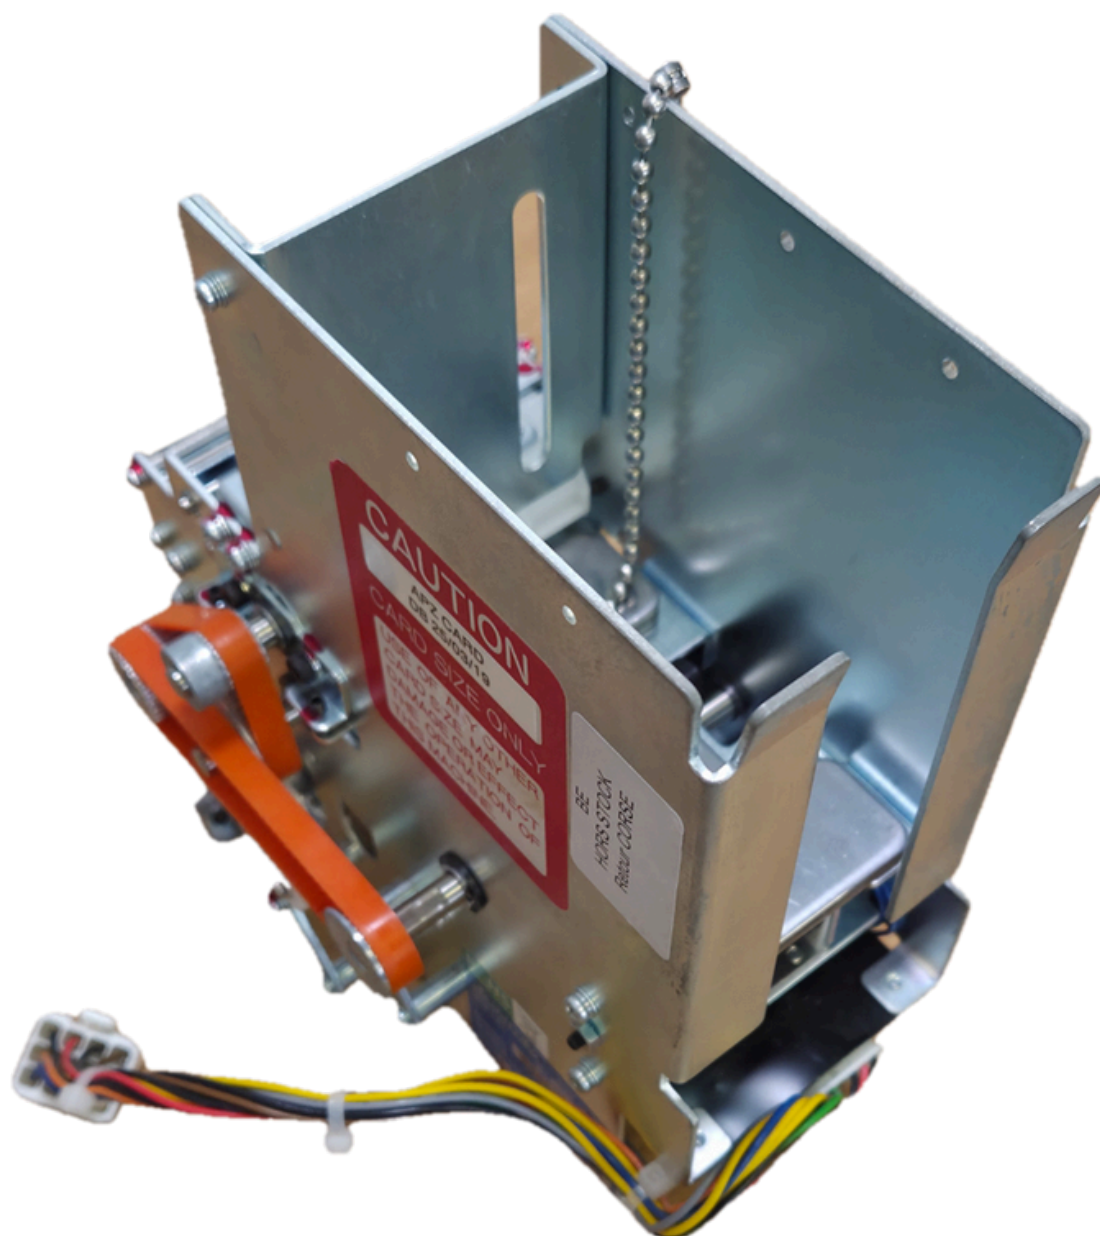

04/2026 V1.0

Under regular conditions, periodic maintenance must be performed every 2 months or every 10 000 cards distributed.

Using a Q-tip and isopropyl alcohol, meticulously clean the clutch roller. The clutch roller can rotate freely even when the product is not in operation.

With a cloth soaked in isopropyl alcohol, wipe every metal surfaces inside the product.

Sometimes, the optical sensors can be dirty. Blow them with compressed air or simply wipe them with a clean and dry cloth.

Also check the wear on the drive belts (1-2mm of deflection when a light pressure is applied on the longest strand).

Before reloading the product with cards, make sure the alcohol has completely evaporated.

During the maintenance operation, perform a visual inspection of the product to ensure that there are no broken or damaged parts, that the belts are not frayed or worn, that the rollers are not worn, that there are no foreign objects inside the product, etc...

