




Quick start guide Simply Pay® V2

1. Top-up and bonus tiers


The top-up and bonus tiers can be customized in the programming menu of your Touch'N Pay® kiosk.

1. Access to the programming menu

Press and hold the date until the password entry screen appears, then enter the password :
#69330#

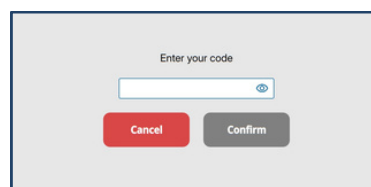

The menu in the Touch'N Pay® kiosk are organized as follows :
In red the settings you are going to use

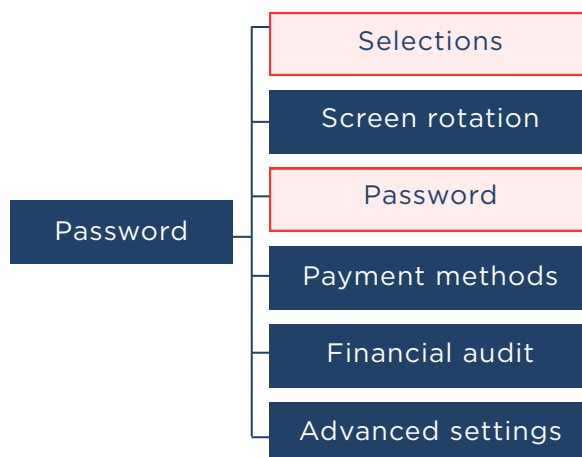

Important : The kiosk comes with a default password. Change this password upon first use to ensure the security of the kiosk.



2. Add Simply Pay®

Creation of the selection

- Access the selection page.
- Press the button “Add” in the bottom right-hand corner to insert a selection.

Configuration of the selection

- In the Type box, select “**Loyalty**”
- **Rename the selection if necessary.**
- In the Top-up method box, select “**Simply Pay**”.

Top-up and bonus tiers configuration



Use the + button to add a tier.

Use the - button to remove a tier.

*The top-up and bonus tiers need to be indicated in **euro cents** : €1 = 100 cents*




To save your settings, click on save, in the bottom right-hand corner.

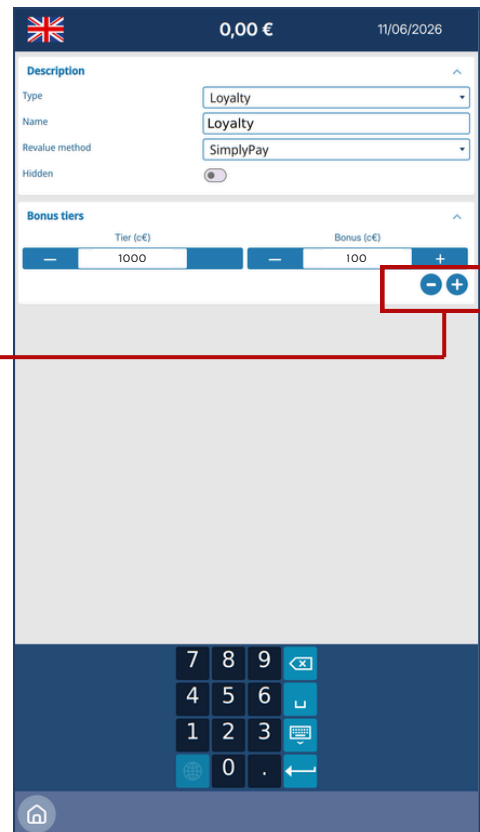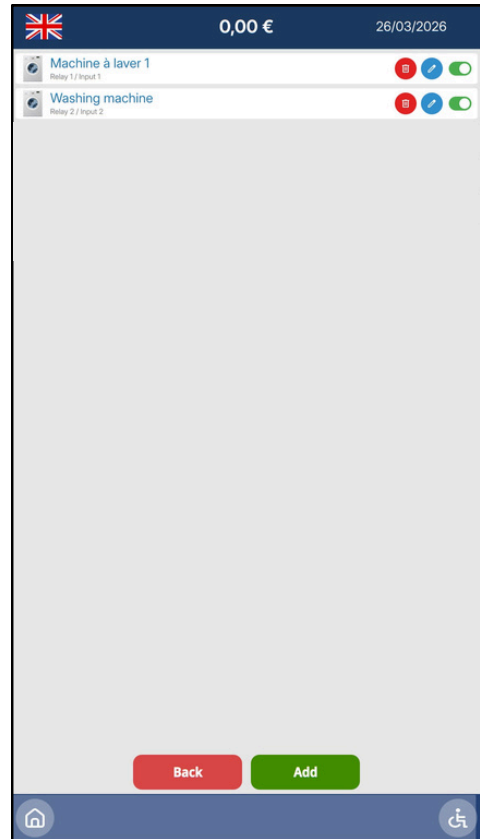

2. Remote control website : configuration center Simply Pay®

Go to your remote control website portal to configure Simply Pay®.

From the Simply Pay® tab (1) to Configuration (2) click on the gear icon for the banking kiosk of your choice (3)

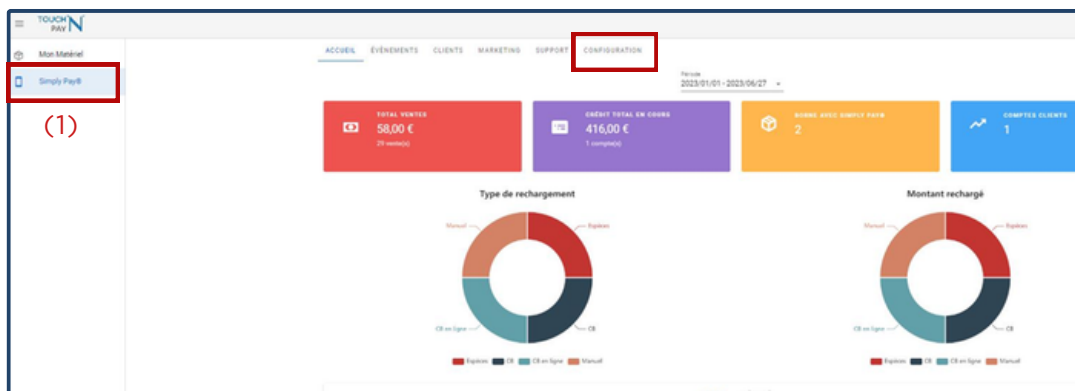


Management of the equipments



By default, each functionality of the selected banking kiosk are activated. Deselect the features you don't want to offer your customers.

- The online top-up will be visible but grayed out.
- The option to reserve a machine will not be visible.

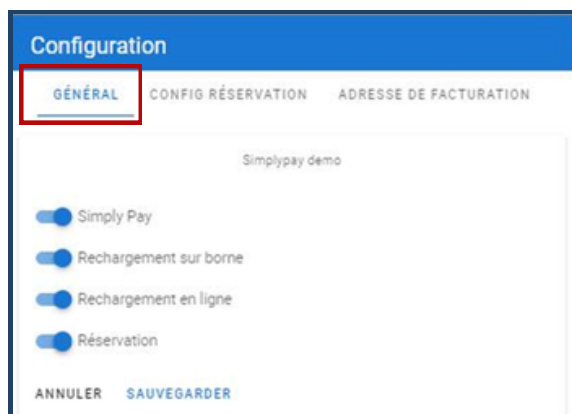

Selection of machines available for reservation

The length of time a machine can be reserved: 10 minutes or 15 minutes.

If a user has made a reservation but does not use it within the allocated time, they can no longer make any further reservations for the day.




Fill in the billing address

The receipt is generated automatically whenever a TOP-UP is made to the Simply Pay® wallet.



Avoid « INVOICE ERROR »

Complete right now “BILLING ADDRESS” otherwise, your customers will have an error message on Simply Pay® App and the inability to retrieve their invoices.

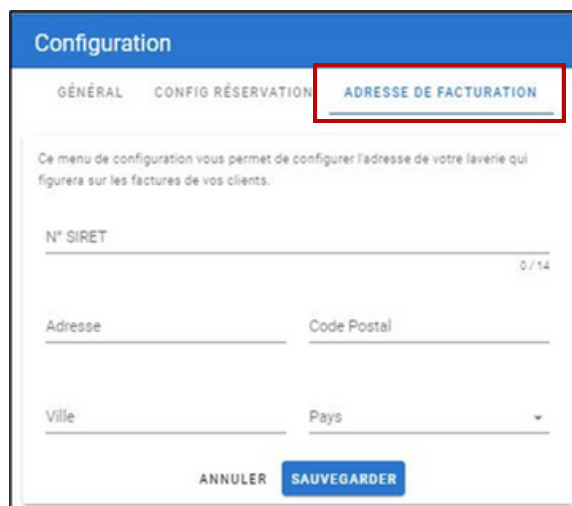


Management of the equipments



Special offers and targeted communications


- Without group management, by default, customers have access to all your laundromats and all your kiosks using Simply Pay®.
- By setting up groups, a client that scans a kiosk belonging to a group will have access to all the kiosks in that group.

IZLYPAY is the CROUS payment solution designed for students. It allows them to pay directly with their Izly wallet.



Payment methods

Configuration needed **if the OPTION “Online top-up” is activated**

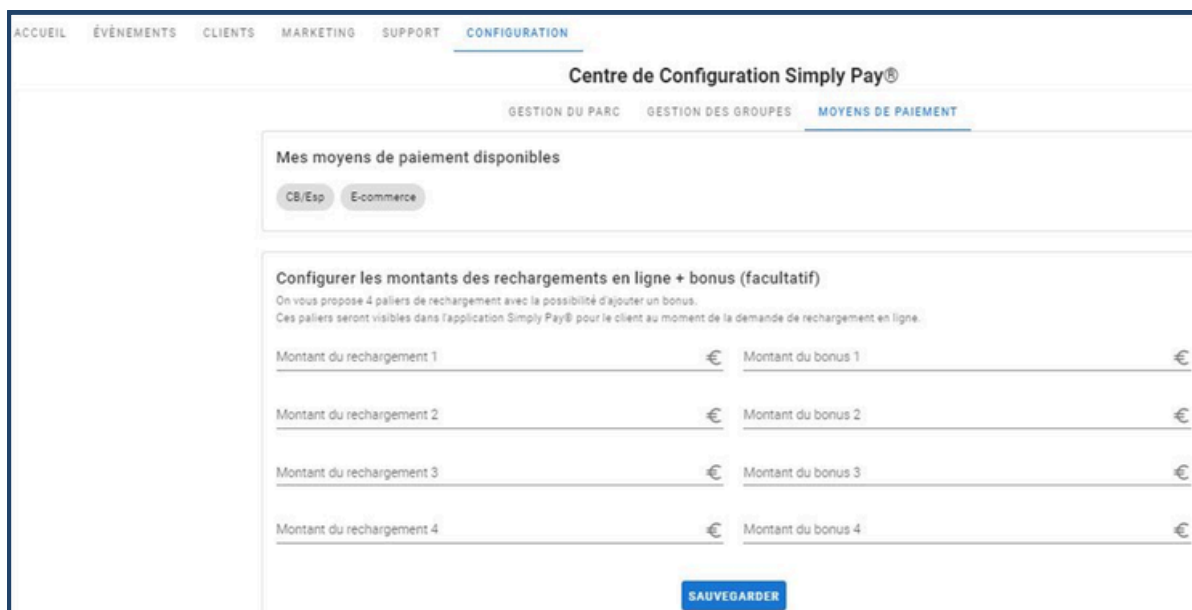

The screenshot shows the 'Centre de Configuration Simply Pay®' interface. The navigation menu includes ACCUEIL, ÉVÈNEMENTS, CLIENTS, MARKETING, SUPPORT, and CONFIGURATION. The current page is 'MOYENS DE PAIEMENT' under 'GESTION DES GROUPES'. The main content area is titled 'Mes moyens de paiement disponibles' and shows two active options: 'CB/Esp' and 'E-commerce'. Below this is a section for 'Configurer les montants des rechargements en ligne + bonus (facultatif)'. It includes a sub-header and a description: 'On vous propose 4 paliers de rechargement avec la possibilité d'ajouter un bonus. Ces paliers seront visibles dans l'application Simply Pay® pour le client au moment de la demande de rechargement en ligne.' The configuration table has four rows, each with a 'Montant du rechargement' and a 'Montant du bonus' field, both with a Euro symbol (€) and a text input field. A 'SAUVEGARDER' button is located at the bottom right of the configuration area.

Montant du rechargement	Montant du bonus
Montant du rechargement 1	Montant du bonus 1
Montant du rechargement 2	Montant du bonus 2
Montant du rechargement 3	Montant du bonus 3
Montant du rechargement 4	Montant du bonus 4

Additionally to the Touch'N Pay® kiosk top-up, you can give customers the option to top up their loyalty account online.


To activate this functionality, you need to subscribe to a special acquiring contract with your bank. Feel free to contact us at marketing@lmcontrol.fr

Once the online top-up is activated, you can configure the 4 top-up tiers and their bonuses.

3. Remote control website : Simply Pay® Marketing

We suggest the implementation of 2 special offers :

- Welcome offer
- Related vend

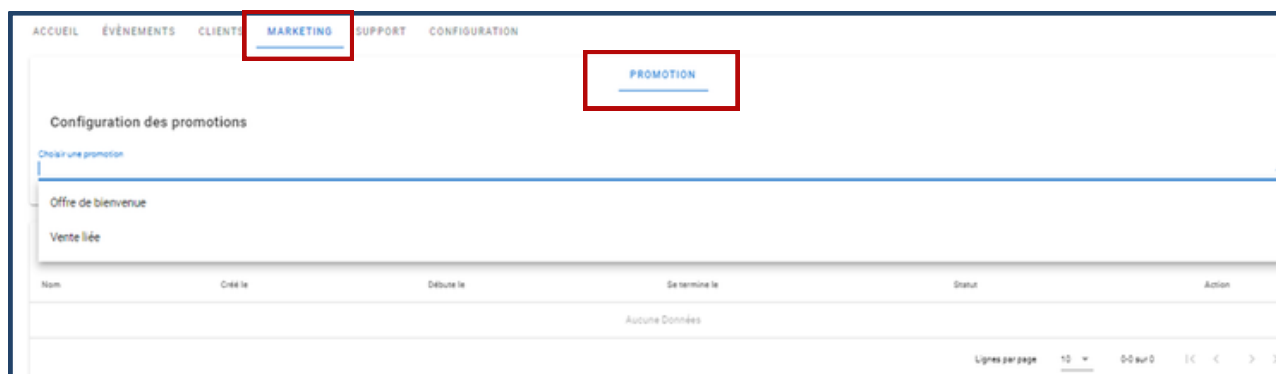

Welcome offer :

When making their first top-up, users can receive a bonus.

You choose :

- A minimum top-up amount to benefit from the bonus.
- Promotion start date and end date.

Related vend :

You give priority to customers who use multiple services in your laundromat.

After the first purchase, the user benefits from a discount on a second purchase for an allocated period of time.

Example : with the related vend a Simply Pay® customer who buys a washing machine and then a dryer will pay less for the dryer than a customer who just comes in to use the dryer.