TOUCH'N PAY

Micro SD card replacement

This document shows the key steps for the micro SD card replacement as part of the Touch'N Pay migration from V1 to V2.

Important: Each microSD card is configured for a specific control unit.
The serial numbers of the control unit and the associated microSD card are listed on the delivery slip. To ensure the system functions properly, be sure not to swap microSD cards between different control units. Swapping them will prevent the remote management feature from working.

Before starting, generate the information sheet and memorise the kiosk settings. (ex. machines prices, pulse duration).

Every following actions must be done **POWERED OFF** :

- Turn off the power from the circuit breaker in the electrical board
- Turn the switch to OFF and unplug the power supply from the PC unit

1

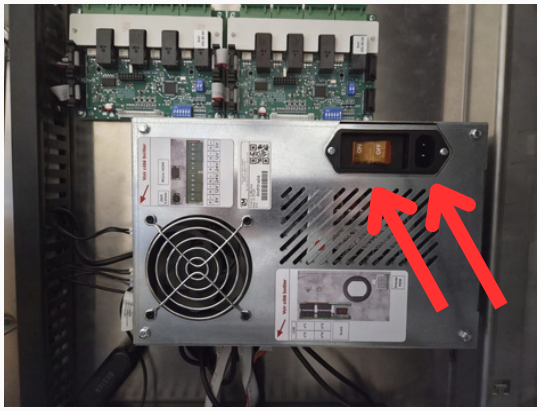

Turn the kiosk to OFF then unplug the power supply.

2

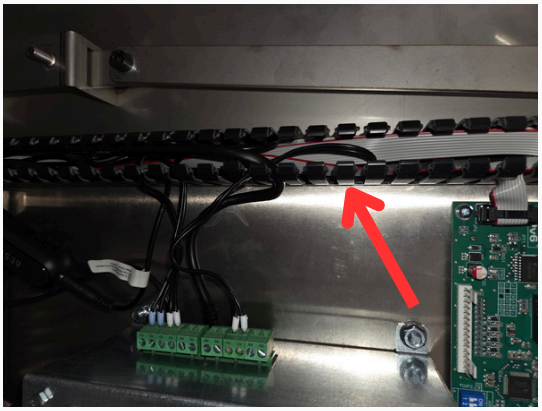

Remove the trunking covers

Be careful not to touch or disconnect the cables connected to the PC unit.

3

Unscrew the 4 M6 nuts starting with the bottom two.

4

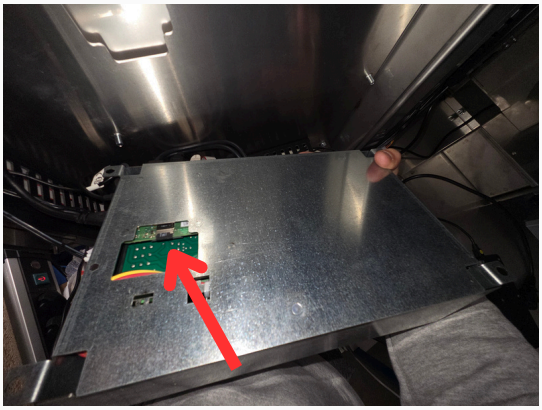

Tilt the PC unit foward to access the micro SD card, without straining onto the USB ports on the opposite side.
Remove the SD card, then insert the new SD card.

Once the card has been replaced, repeat the steps in the reverse order, ensuring not to pinch the cables when reassembling.

Finally, replace the old label with the new one showing the terminal's new serial number.

⚠ Any issues resulting from improper handling may be billed.